



Wheelchair lift Roll On Compact
for internal and external use

Roll On Compact for home-, as well

The Roll On Compact is our new generation of stairlifts, meant for all types of transportation of people, in a wheelchair or using a walker. It is as well suited for a person sitting in a wheelchair as a person standing, due to the sturdy handrail which the lift is equipped with.

The non-slip floor and sensitive edges provide added safety. The platform and safety barriers fold and unfold automatically. The lift provides you with excellent safety with a safety gear and surrounding barriers.

The Roll On Compact is also suitable for other types of transport e.g. pushchairs, cleaning equipment and the transportation of goods.




When the Roll On Compact is not in use, the platform is folded up against the wall providing free passage. This is an excellent solution, especially in narrow stairways.

The lift, in its folded position only takes up 237 mm of space from the wall.

as public- and outdoor environment.

The Roll On Compact is easily and safely installed because of its well-planned mounting system on pillars or directly on a wall. Comfortable maintenance with few and easily accessed parts and an easy-to-service construction.

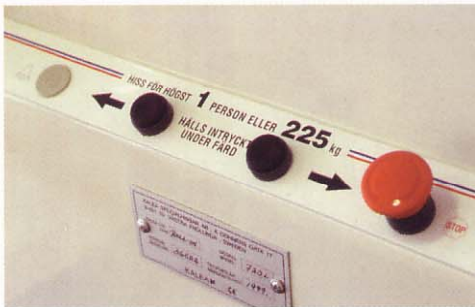

Comfortable and easily assessable push buttons suited for users with reduced strength.



Options:

- Accessible from an angle
- Folded seat
- Single phase drive with soft-start and stop



Advantages of the Roll On Compact:

- ◀ Reusable for mounting on both the left hand side and right hand side of the stairway
- ◀ Modern design
- ◀ No visible motor or electric parts
- ◀ Only takes 237 mm of space from the wall in its folded position
- ◀ Can be folded manually in case of power failure
- ◀ Easy to move if re-used
- ◀ Excellent safety – the lift complies to all standard safety requirements and is also type approved by SAQ
- ◀ In- as well as outdoor models
- ◀ For stairways with 15° - 45° gradient

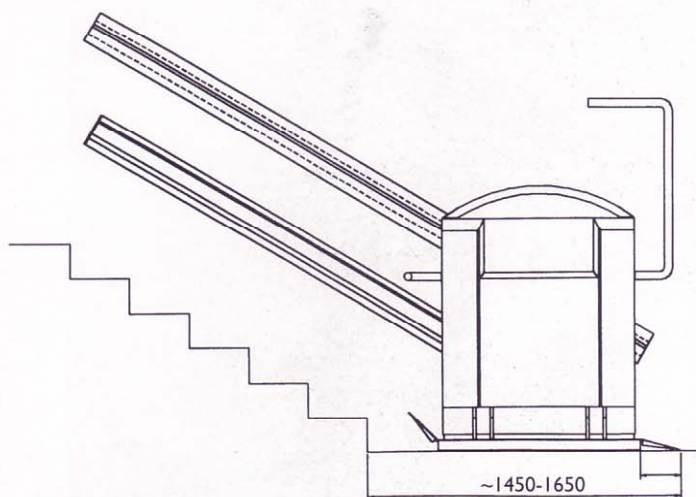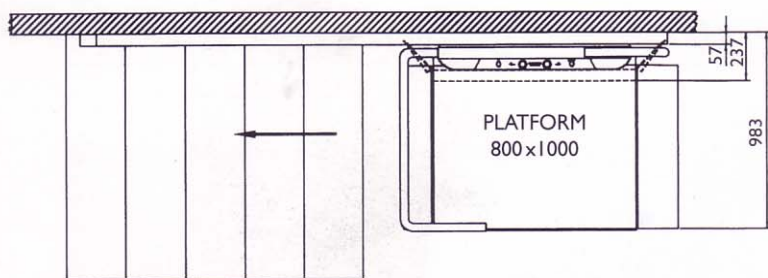

Technical data:

Max. Load capacity: 225 kg

Speed: 0.15 m/s (max.)

Drive: Rack

Motor: Wormgear motor with brake

Safety gear: Overspeed governor and safety gear

Platform: width 800 mm, length 1.000 mm

Electrical connection: 3-phase 400V/230V, 10A. Or single phase (option).

Operation voltage: 24V


Operation of lift: Push buttons on the lift and key switches on both landings

Safety: The lift is type approved by SAQ

Mounting system: The distance between the wall and the rail is 57 mm and with the platform in its folded position, only 237 mm

Would you like an estimate?

Please fill in the form below and send it to us and you will receive an estimate. You can also call and speak to any of our trained persons.

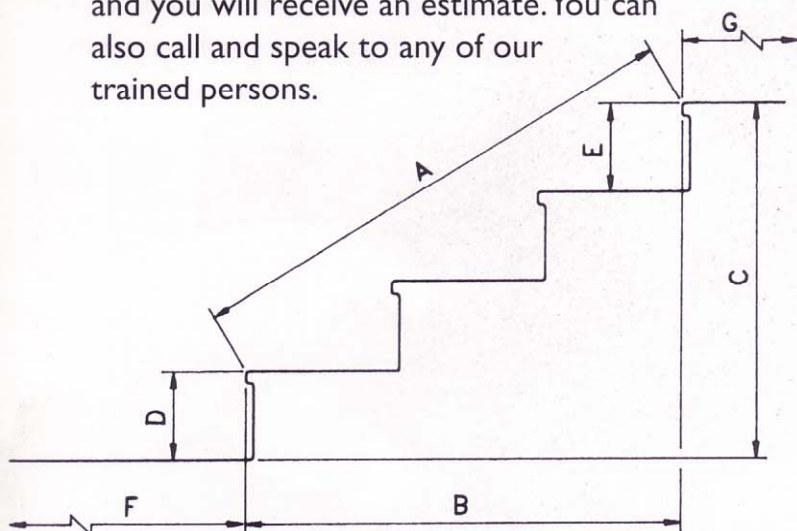

A Nose to nose	mm
B Total depth of riser	mm
C Total height	mm
D Height of first riser	mm
E Height of top riser	mm
F Free space in front of the stairway	mm
G Free space after top riser	mm
H Width of stairway (free space)	mm
I Number of risers (elevation)	st

Note! Due to Kalea's continuous development we reserve the right to alter the technical descriptions without notice.

Agent:

KALEA

Kalea Specialhissar AB
A Odhners gata 17, 421 30 Västra Frölunda.
Tel +46 (0)31-49 04 40. Fax +46 (0)31-47 31 62.
E-mail: kalea@kalea.se
www.kalea.se